

MaxxFan™ Remote Control Operating Guide

The Customer Service Phone Number for MaxxAir is 800-780-9893, e-mail is custservice@maxxair.com

Wireless Remote Control for all Deluxe and Standard Models



ON/OFF

Fan On & Power Off; Press this button:

- To start the fan.
- To turn the fan off.
- To exit Auto Mode.



VENT
OPN/CLS

Vent Lid Position; Press this button:

- To open or close the vent lid.
- While the fan is running in Manual Mode press once to close the vent lid and enter "Ceiling Fan" Mode.
- Note: This button is not active in Auto Mode.
- Note: If the fan loses 12volt RV power or power is removed from the fan, use the knob located at the ceiling to manually open or close the vent lid if desired.



AIR
IN/OUT

Air Exhaust / Intake; Press this button:

- To reverse the fan from intake or exhaust.
- Note: In Auto Mode, the fan direction is automatically positioned to Exhaust, but may be overridden and changed to Intake by depressing this key.
- Note: Some MaxxFan models may be furnished as "Exhaust Only" when installed by the RV manufacturer. If you have an "Exhaust Only" model the "AIR OUT" will flash on the LCD screen and fan will continue to run in Exhaust.



AUTO
ON/OFF

Fan Auto Mode; Press this button:

- To enter Auto Mode. Auto Mode allows the fan lid to automatically open and the fan motor to operate as dictated by the thermostat set point temperature. Once the cabin temperature cools and reaches the set point temperature, the fan lid will close and the fan motor will shut off.
- Pressing this button while in Auto Mode will shut off Auto Mode, close the vent lid and shut off the fan motor.



TEMP+

Thermostat Set Temperature;

Temp + ; Press this button:

To increase the Set Temperature for Auto Mode.

Temp - ; Press this button:

To decrease the Set Temperature for Auto Mode.

- Note: The thermostat ranges is from 29°F to 99°F or -2°C to 37°C. To change from Fahrenheit to Celsius on the temperature display, press and hold both set temperature keys simultaneously.



TEMP-



SPEED+

Fan Speed;

Fan Speed + ; Press this button:

- To increase the fan speed. The fan has ten speeds.

Fan Speed - ; Press this button:

- To decrease the fan speed. The fan has ten speeds.
- Note: When the fan speed reaches either the maximum or minimum speed, the fan will respond with 2 quick beep sounds to indicate this.



SPEED-



Low Battery Indicator


- When the battery is at full charge, three black power bars are displayed.
- One or zero power bars displayed indicates the batteries need replacement.




Transmission Signal

- This symbol is displayed on the screen when any button is pressed to indicate the signal was transmitted to the fan.
- A beep sound from the ceiling unit indicates the signal from the remote control was received by the fan.

Remove Protective
Film from Display
Screen

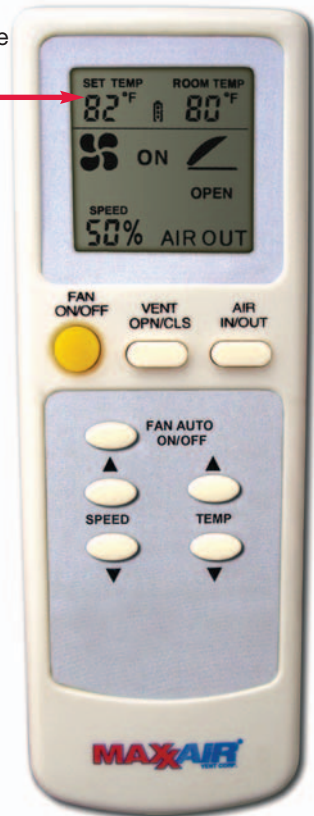

Two AAA Batteries Provided

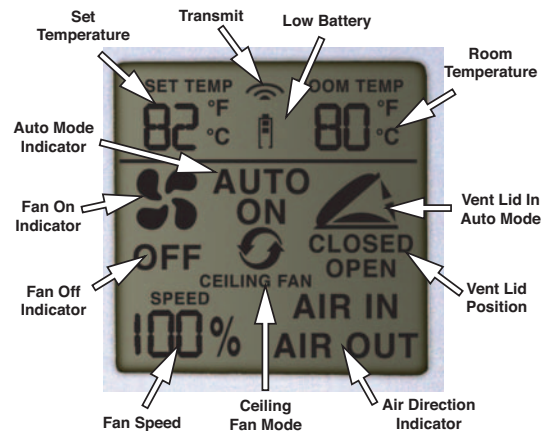

LCD Screen Icons

Note: After 5 minutes of inactivity, the LCD screen will go blank to conserve battery power. Press any button once to turn the LCD screen on.



Visit our website at www.maxxair.com

MaxxAir Vent Corp • 5513 W. Sligh Ave • Tampa, FL 33634 • Phone (800) 780-9893 • (813) 882-8282 • Fax (813) 876-2550